


Shock absorbers and bushings

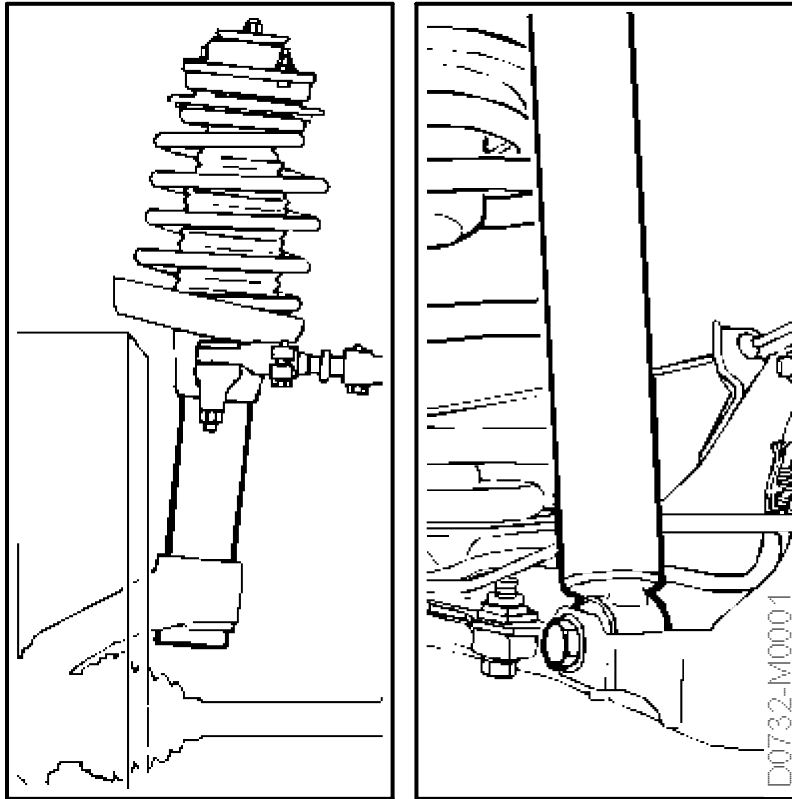

Make sure there is no oil present on the outer pipe of the shock absorbers.

Check the condition of the shock absorber bushings and support bearings.